 


How to use the Advent XT2 Door Entry System

- 1 WHEN YOUR TELEPHONE RINGS PICK-UP THE HANDSET AND ASK WHO IS THERE?




PRIVACY MODE

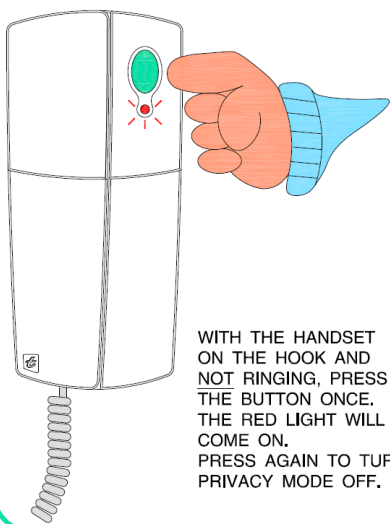


WITH THE HANDSET ON THE HOOK AND NOT RINGING, PRESS THE BUTTON ONCE. THE RED LIGHT WILL COME ON. PRESS AGAIN TO TURN PRIVACY MODE OFF.

- 2 IF YOU WISH TO ADMIT THE VISITOR, PRESS THE BUTTON ONCE. YOU WILL HEAR BEEPS WHEN THE DOOR IS OPEN.

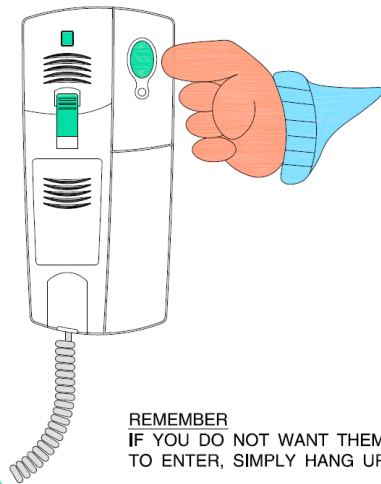

REMEMBER
IF YOU DO NOT WANT THEM
TO ENTER, SIMPLY HANG UP.

DOOR OPEN INDICATION

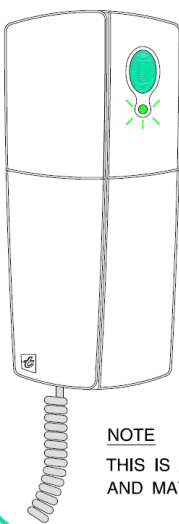

A GREEN LIGHT WILL
COME ON WHEN THE
MAIN ENTRANCE
DOOR IS OPEN.

IF THE LIGHT FLASHES
RED/GREEN, YOU HAVE
PRIVACY ON AND THE
DOOR IS OPEN.

NOTE
THIS IS AN OPTIONAL FEATURE
AND MAY NOT BE AVAILABLE.

User Guide

For Your

ADVENT XT2 DOOR ENTRY TELEPHONE



Telephone Model No. ZXT955

tynetec
A brand of **legrand**

INTRODUCTION

Your Advent XT2 telephone is used to answer calls from visitors using the buildings door entry system. The pushbutton has two functions;

1. It can release the entrance door and allow your visitors access
2. It can select privacy mode and prevent nuisance calls

The LED indicator will illuminate different colours for different conditions.



It is important that you read these instructions before use, if you need further assistance please contact your Housing Manager.

TO ANSWER A CALL

Your telephone will ring when a visitor is calling

The ring tone will repeat until you pick-up the handset or the call times-out

Lift the handset and speak with the caller

To allow access, press the pushbutton once

You will hear beeps in the earpiece when the lock is released

The LED indicator will illuminate **GREEN** when the door is open

Replace the handset on the hook to end the call.

If you hold a conversation to within 10 seconds of the pre-set speech time you will hear timeout pips before the call is automatically cancelled.

Remember; if you don't want to let the caller in or you are unsure of their identity simply replace the handset to end the call.

TO SELECT PRIVACY MODE

You can select privacy mode if you do not want to receive any calls;

With the handset on-hook and the phone not ringing, press pushbutton once

The LED indicator will illuminate **RED** to indicate privacy is on

You cannot receive any calls when privacy is on

To return to normal operation, press the button again and the red LED will go out

Note; if your telephone is set for "Timed Privacy" then privacy mode will turn off automatically after a pre-set period.

DOOR OPEN INDICATION

When the entrance door is open the LED indicator will illuminate **GREEN** on all telephones simultaneously – when the door is closed all will go out.

If the LED is illuminated **GREEN** for an extended period it is likely the entrance door has been left open and the building is not secure.

If you have privacy mode selected and the door is left open the LED indicator will flash **RED/GREEN** until the door is closed.

ALTERNATIVE RING TONE

With the handset on-hook, privacy mode off and no call in progress, press and hold the pushbutton for 5 seconds then release. The LED will flash amber then the telephone will cycle through 3 different ring tones at 3 different volume levels. Press the button when your chosen tone/volume is sounding.