



TO CALL FOR ASSISTANCE

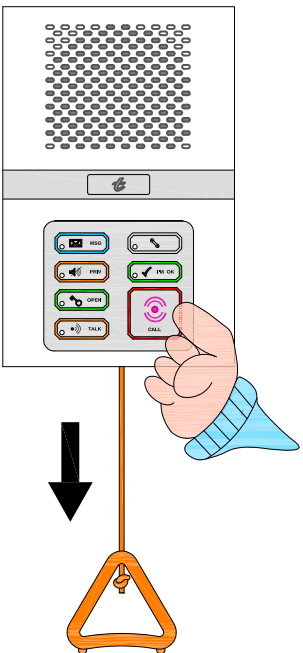


PULL THE ORANGE CORD OR PRESS THE  BUTTON ONCE AND THE LIGHT WILL ILLUMINATE **RED**

OR

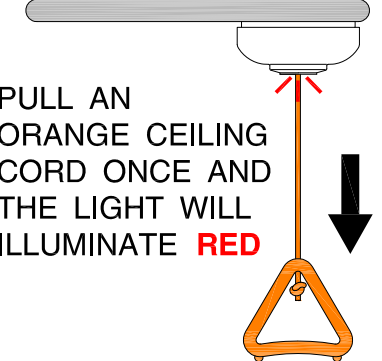

PULL AN ORANGE CEILING CORD ONCE AND THE LIGHT WILL ILLUMINATE **RED**


OR

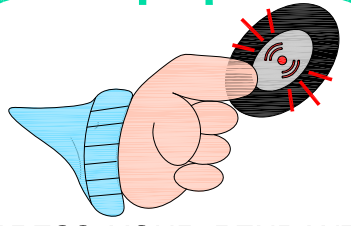

PRESS YOUR PENDANT BUTTON ONCE, IT WILL FLASH **RED** THEN FLASH **GREEN** WHEN THE CALL IS RECEIVED.

WHEN YOUR CALL IS ANSWERED
SPEAK CLEARLY AND SLOWLY


MESSAGE SERVICE

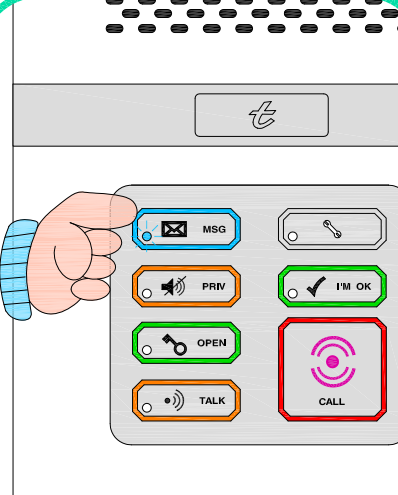


YOU HAVE A MESSAGE WAITING IF THE INTERCOM SOUNDS A SERIES OF TONES AND THE LIGHT IS **FLASHING BLUE**. PRESS THE  MSG BUTTON TO PLAY THE MESSAGE. THE MESSAGE CAN BE REPEATED FOR UP TO 60 SECONDS.

USING THE DOOR ENTRY SYSTEM

1 WHEN THE INTERCOM RINGS AND THE TALK LIGHT FLASHES AMBER PRESS THE  TALK BUTTON ONCE TO ANSWER THE CALL.

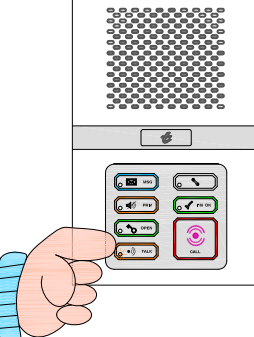

OR

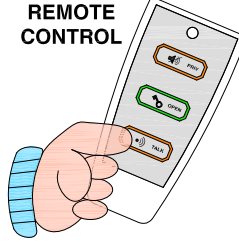


OPTIONAL REMOTE CONTROL

SPEAK TO YOUR VISITOR AT THE DOOR, STOP SPEAKING TO LISTEN.

THE LIGHT WILL BE **STEADY AMBER** WHEN THE CALL IS ANSWERED.

2 IF YOU WISH TO ADMIT A VISITOR, PRESS THE  OPEN BUTTON ONCE.


OR

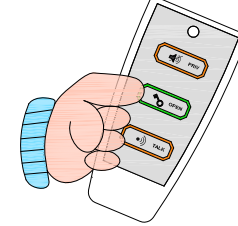


THE LIGHT WILL ILLUMINATE **GREEN** FOR 5 SECONDS

3 IF YOU DON'T WANT A CALLER TO ENTER, PRESS THE  PRIV BUTTON ONCE TO END THE CALL.

OR

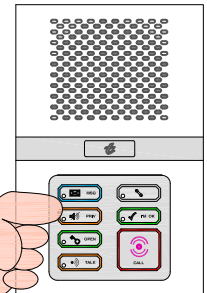


I'M OK FUNCTION

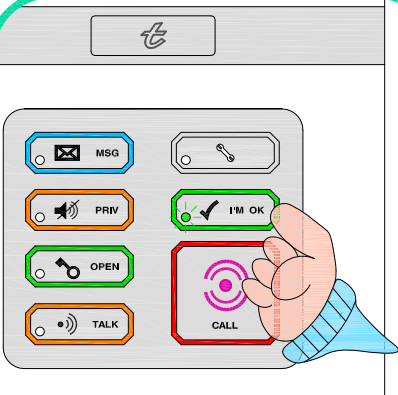


IN THE MORNING IF THE INTERCOM SOUNDS 2 TONES AND/OR THE LIGHT IS **FLASHING GREEN** PRESS THE  I'M OK BUTTON TO LET THE MANAGER KNOW YOU ARE OK.

PRIVACY MODE

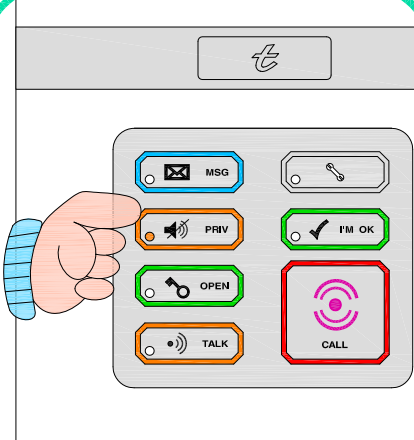

FOR PRIVACY PRESS THE  PRIV BUTTON ONCE AND THE LIGHT WILL ILLUMINATE **AMBER**. PRESS AGAIN TO TURN PRIVACY OFF.

AWAY MODE

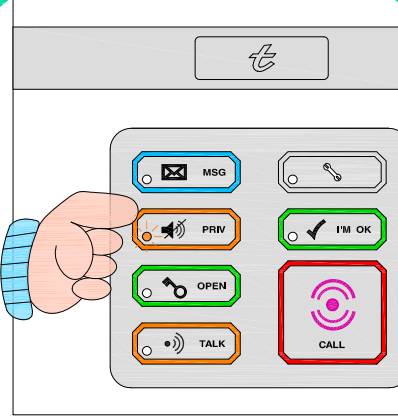


FOR AWAY MODE PRESS AND HOLD THE  PRIV BUTTON UNTIL A TONE SOUNDS THEN RELEASE. THE LIGHT WILL FLASH **AMBER**. PRESS AGAIN TO TURN AWAY MODE OFF.

PRIVACY MODE

WITH NO CALL IN PROGRESS, PRESS THE  PRIV BUTTON ONCE AND THE LIGHT WILL ILLUMINATE **AMBER**.

YOU WON'T GET DOOR ENTRY CALLS AND THE MANAGER CANNOT HEAR YOU WITH PRIVACY ON. PRESS AGAIN TO TURN PRIVACY OFF.


OR

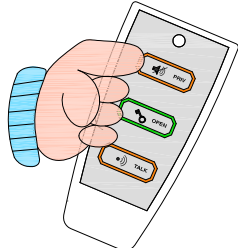

DOOR OPEN WARNING

THE  OPEN LIGHT WILL **FLASH GREEN** IF THE DOOR IS LEFT OPEN*.

*NOTE: THIS IS AN OPTIONAL FEATURE AND MAY NOT BE AVAILABLE.

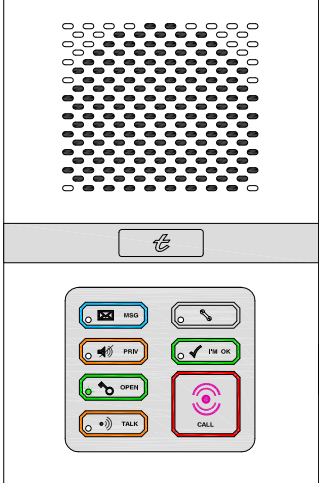

THE MAINTENANCE LIGHT  WILL FLASH WHITE WHEN THE BATTERY IN YOUR REMOTE CONTROL NEEDS REPLACING.